

User Manual

SINCE 1993

F5060X
5.1 Computer Multimedia Speaker

Caution

- Do not place system in high temperatures or humid environments, keep the system dry and handle with care to avoid damage.
- In order to avoid electric shock and other accidents, do not open the back panel cover for repair without professional guidance.
- In case fragments or other liquids are accidentally sprinkled inside the cabinet, please switch off the power immediately.
- In case of repair, please come to F&D's professional maintenance for help.
- Switch off the power and unplug from the power jack when the system is not on work.
- Keep the cabinet vent far from the wall by 20mm at least and the air vent should not be blocked.

Front panel keys

- Standby
- Sound
- Source
- Previous/Decrease volume
- Play/Pause/Scan/BT Pair
- Next/Increase volume

Remote control

- Standby ON/OFF
- Source button
- Bluetooth pairing button
- Tune + button
- Volume decrease
- Tune - button
- FM auto scan button
- Play/Pause button
- Previous button
- Center volume increase button
- Front volume increase button
- Front volume decrease button
- Center volume decrease button
- Bass decrease button
- Press to mute or unmute the sound
- Sound button
- Light/Reset button
- Volume increase button
- FM station Memory button
- Next button
- Rear volume increase button
- Rear volume decrease button
- Bass increase button
- Numeric keys
- Enter key

Remote control keys function

- Turn on/off unit.
- Source: Switch between BT, DVD, AUX, USB and FM mode.
- Short press to enter in to Bluetooth mode & long press will enter in to Pairing mode. Blue LED display will flash fast.
- Tune +/-: FM mode: Fine Tuning: Short press to increase or decrease one step (100KHz), FM LED display flash once. LED display stop flashing once it reaches to Minimum or Maximum frequency. Manual Tuning: Long press of this key works for Manual tuning. It finds the next available frequency.
- Volume +/-: Decrease or increase the master volume.
- Scan: FM mode: Short press to start Auto Search & this will store the found frequencies (channels) automatically.
- Play/Pause: a. USB Mode: Short press to play/pause the music playback. b. Bluetooth mode: short press to play/pause music.
- Previous: a. USB Mode: Short press to select previous song and long press to select previous folder. b. FM mode: Short press to select previous stored station, FM LED display flash once. When it reaches to 1st stored station/channel, short press of this key does not change the channel & LED display remains bright. c. Bluetooth mode: short press to select previous song.
- Center +/-: Increase or decrease volume of center speaker.
- Front +/-: Increase or decrease the volume of front speakers.
- SW +/-: Increase or decrease the volume of subwoofer.
- Mute: Press it to mute or unmute the sound.
- Sound: switch between Normal & Prologic sound effects.
- Light/Reset: short press to turn on/off light. Long press to go to default settings.
- MEM: Short press of this key work to store tuned station through Fine or Manual tuning. FM LED display flash once to indicate store/save operation. (max. 100 stations).
- Next: a. USB Mode: Short press to select next song and long press to select next folder. b. FM mode: Short press to select next stored station, FM LED display flash once. When it reaches to last stored station/channel, short press of this key does not change the channel & LED display remains bright. c. Bluetooth mode: short press to select next song.
- 21/22: Rear +/-: Increase or decrease volume of rear speakers.

Bluetooth pairing

Switch to Bluetooth mode, F5060X will automatically search the Bluetooth device. If the device paired before, F5060X will connect automatically.

If can't find paired device, F5060X will enter pairing mode automatically, bluetooth LED display under pairing button flashes quickly.

- Active "Bluetooth" function on your device and search for "Fenda F5060X". Enter "0000" if your device asks for the PIN code.
- After pairing successfully, bluetooth LED display will be bright, and ready for playing music. Recommend to adjust suitable volume before playing music.

Tips: To make sure your PC or notebook is working well with your Bluetooth speakers, it is recommended that you check with your PC or notebook vendor first. Make sure the correct Bluetooth driver software is installed.

Prologic function

A. You can convert 2.0 channel into 5.0/PROLOGIC effect by selecting "PROLOGIC" through Sound key of remote.

B. To get real 5.1 effect, connect 5.1 CH output of your DVD to the 5.1 input of F5060X & select "NORMAL" through the sound key of remote.

Packaging content

① Speaker	1set
② RCA to RCA cable	3pcs
③ RCA to 3.5mm cable	1pc
④ Remote control	1pc
⑤ Manual & warranty card	1pc

Fenda F5060X support APP control, you can search "Fenda" to download the application in IOS store and Google play, or you can scan the below QR code to download the APP directly.

QR code for IOS QR code for Android

SHENZHEN FENDA TECHNOLOGY CO., LTD. GUANGDONG, PRC
ADD: Fenda Hi-Tech Park, Zhoushi Road, Shiyuan, Baoan, Shenzhen, Guangdong, PRC
Tel: +86-755-27188888 Fax: +86-755-27188888 P.C.: 518108

System connection

Instruction of rear board

- AUX L/R input
- DVD F/R/L input
- DVD S,R/S,L input
- DVD SW/Center input
- Speaker front right output
- Speaker front left output
- Speaker center output
- Speaker rear right output
- Speaker rear left output
- Power switch
- FM antenna
- Power cable

Specifications

Output Power(RMS): 60W+15WXS
Full Range: 3"
Tweeter: 1"
Subwoofer: 8"
Frequency response:
Sub-wwoofer amplifier: 25Hz-85Hz
Satellite amplifier: 60Hz-20KHz
S/N Ratio: >70dB
Separation: >50dB
Power: 100V-240V-50/60Hz 2A
Unit size:
Satellites: W104XD90XH205mm
Full Range: W86XD284XH103mm
Subwoofer: W240XD396XH356mm
Net Weight: 10.2kg

F&D WARRANTY CARD

END-USER'S COPY

WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name: _____
Last Name: _____
Address: _____
Contact No.: _____
Product Name: _____
Model No.: _____
Serial No.: _____
Date Purchased: _____
Invoice No.: _____
Retail Outlet Where Purchased: _____

(Please print the name & address)

SECTION 1

Shenzhen Fenda Technology Co., Ltd.
Add: Fenda Hi-Tech Park, Zhoushi Road, Shiyuan, Baoan, Shenzhen, China
P.C.: 518108 Http://www.fenda.com

F&D WARRANTY CARD

DISTRIBUTOR'S COPY

WARRANTY REGISTRATION CERTIFICATE

Mr./Mrs/Ms First Name: _____
Last Name: _____
Address: _____
Contact No.: _____
Product Name: _____
Model No.: _____
Serial No.: _____
Date Purchased: _____
Invoice No.: _____
Retail Outlet Where Purchased: _____

(Please print the name & address)

SECTION 2

Shenzhen Fenda Technology Co., Ltd.
Add: Fenda Hi-Tech Park, Zhoushi Road, Shiyuan, Baoan, Shenzhen, China
P.C.: 518108 Http://www.fenda.com

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of F&D product within the warranty period, from its date of purchase from our Authorised Dealer. The period and conditions of our warranty service are as follow:

- The warranty covers services by our F&D Authorised Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.
- Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our F&D Authorised Dealer. (Parts would be replaced when necessary)
 - Parts: 1 year
 - Technical service free: 1 year
- Under the following circumstances, service and parts will be chargeable even within the warranty period:
 - Failure to present the warranty card and receipt when servicing is required.
 - Full particulars not clearly shown or alterations made against the actual information. For e.g. Alteration of the date of purchase, serial numbers-altered or removed.
 - This unit being tampered with, altered in any way by any unauthorised technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occurring in transit by or from the customer.
 - The defect is caused by the attack of household pests, fire, lightning, natural disasters, pollution, abnormal voltage or the usage of generator.

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to the company within 14 days from the date of purchase. We guarantee the provision of free services of F&D product within the warranty period, from its date of purchase from our Authorised Dealer. The period and conditions of our warranty service are as follow:

- The warranty covers services by our F&D Authorised Dealer. This warranty card together with the receipt must be presented when servicing is required. This warranty card is irreplaceable in the event of loss.
- Repair services will be provided for defects arising from normal usage for the following period, commencing from the date of purchase from our F&D Authorised Dealer. (Parts would be replaced when necessary)
 - Parts: 1 year
 - Technical service free: 1 year
- Under the following circumstances, service and parts will be chargeable even within the warranty period:
 - Failure to present the warranty card and receipt when servicing is required.
 - Full particulars not clearly shown or alterations made against the actual information. For e.g. Alteration of the date of purchase, serial numbers-altered or removed.
 - This unit being tampered with, altered in any way by any unauthorised technicians or which has been subjected to misuse, negligence or accident. This guarantee does not cover damage occurring in transit by or from the customer.
 - The defect is caused by the attack of household pests, fire, lightning, natural disasters, pollution, abnormal voltage or the usage of generator.

展开尺寸	
成型尺寸	
材质要求	105g铜版纸
印刷要求	单黑正反印刷
工艺要求	无处理
页码数(页)	折页

F&D 奋达科技		时 间	订 单 号	自然切换	
品 牌	F&D	公司型号	客 户 型 号		
版 本		设计内容	说 明 书		
电 子 软 件		结 构 电 声	PLM文档编号		
设计者	杨改改	标 准 化	项 目 经 理		
复 核		业 务	产 品 经 理		
			核 准		